



## Logitech Crayon



Logitech Crayon is a versatile, pixel-precise digital pencil that elevates the way teachers teach and students learn in classrooms. Crayon brings another dimension to learning and opens up new avenues of creativity for any class or curriculum.

### WHAT'S IN THE BOX

Documentation  
Logitech Crayon

### FEATURES



## PACKAGE SPECIFICATIONS

	Primary pack	Master shipper carton
Part #	993-001926	N/A
Bar code	097855147653 (EAN-13)	10097855147650 (SCC-14)
Weight gr	23	308
Length cm	7.5	15.8
Width cm	8.3	11.1
Height/depth cm	2.1	9.3
Volume	0.13 dm <sup>3</sup>	0m <sup>3</sup>
1 primary pack	1	N/A
1 master shipper carton	10	1
1 pallet EURO	0	0
1 container 20 ft	132000	13200
1 container 40 ft	277200	27720
1 container 40 ft HQ	277200	27720

## SYSTEM REQUIREMENTS

iPad OS 12.2 and above

## TECHNICAL SPECS

Height: 163 mm (6.5 in)  
Width: 12 mm (0.5 in)  
Depth: 8 mm (0.3 in)  
Weight: 20 g (0.7 oz)  
Protection: 1.2 m drop protection  
Power and Connectivity:  
Lithium battery  
Up to 7.5 hrs of active writing time on a full charge  
Automatically powers off after 30 minutes of idle time to preserve battery  
On/off button requires 1 sec press  
Battery life indicator: Short press on the on/off button  
Green light if battery > 10%  
Red light if battery < 10  
LED blinks red if battery life < 5%  
Charge via iPad lightning cable  
Charging port covered by replaceable tethered cap  
Logitech Crayon Tip:  
Tilt sensitivity for dynamic line weight  
Palm rejection technology ignores stray touches  
Tip can be damaged if Logitech Crayon is dropped and may also wear down with extended use. If either of these occur, tip will need to be replaced to avoid damaging iPad screen. Replacement tips can be purchased at: <http://support.logitech.com/product/crayon/spare-parts>

### PRODUCT SETUP

To start using Logitech Crayon, simply turn on and draw. No software downloads or pairing required. Here are some tips to get started:  
Make sure you are using a compatible iPad model  
Make sure iPad is updated to iPad OS 12.2 or above. To check your iOS version, go to iPad Settings → General → Software.  
Disconnect any previously connected digital pencils, such as Apple Pencil®, prior to using Crayon by going to iPad Settings → Bluetooth → Select the device you want to disconnect. If you do not want to forget other digital pencils, simply turn your bluetooth off before using Crayon. Press the power button for 1 second. If the LED turns green, you're ready to go. If LED turns red, charge Crayon before use.

### SOFTWARE UPDATES

Updating the iPad OS on your iPad may affect your experience with Crayon. If you notice changes in functionality, simply follow these steps:  
Download Logitech Crayon software update <https://support.logitech.com/product/crayon/downloads>  
Connect Logitech Crayon to laptop via lightning cable.  
Follow the prompts to update software.

EDU ONLY: There is no limit to how many Crayons you can connect at one time. The firmware update app can update 8 devices at a time. Every update takes about 2 minutes. To get notifications about software updates, product tips, and more, visit: [https://support.logitech.com/en\\_us/product/crayon/register](https://support.logitech.com/en_us/product/crayon/register)