

VCR20 Remote Control


Introduction

You can use the VCR20 Remote Control to control the MeetingBar A20/A30. VCR20 uses two AAA batteries (1.5V).

VCR20 Compatibility

For the VCR20 compatibility, please refer to [Teams Room Accessories Compatibility Lists](#).

How to Use

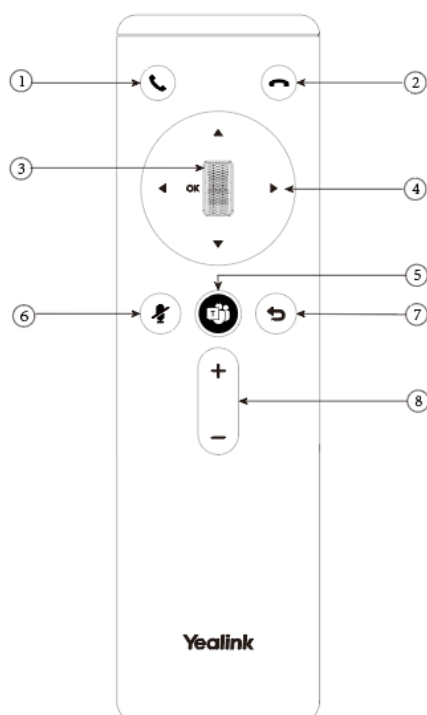

| No. | Item | Description |
|-----|-----------------------|---|
| 1 | Answer Key | Make or receive calls |
| 2 | End Key | End a call or exit the current meeting. |
| 3 | Scroll Wheel (OK Key) | <ul style="list-style-type: none">- Long press the Teams Key to bring up the sidebar, enter Camera Control, and swipe up to zoom in the camera image- Long press the Teams Key to bring up the sidebar, enter Camera Control, and swipe down to zoom out the camera image- Press OK to confirm. |
| 4 | Navigation Key | Long press the Teams Key to bring up the sidebar, enter Camera Control , and pan and tilt the camera to adjust the viewing angle. |

| | | |
|---|------------|--|
| 5 | Teams Key | <ul style="list-style-type: none">- On the home screen, press the Teams key to join the first meeting on the meeting list.- On the home screen or in a meeting, press and hold the Teams key for 5 seconds to open the sidebar. |
| 6 | Mute Ke | Mute or unmute the microphone. |
| 7 | Return Key | Return to the previous level. |
| 8 | Volume Key | Turn up/down the volume. |